Specifications for PIXMA iP110



Print		
Maximum Printing Resolution	9600 (horizontal)*1 x 2400 (vertical) dpi	
Print Head / Ink	Number of Nozzles:	Total 1,856 nozzles
	Ink Droplet Size (minimum):	1pl
	Ink Tank:	PGI-35, CLI-36
Print Speed Based on ISO / IEC 24734. Click here for summary report Click here for Document Print and Copy Speed Measurement Conditions	Document: Colour* ² : ESAT / Simplex:	Approx. 5.8ipm
	Document: B/W* ² : ESAT / Simplex:	Approx. 9.0ipm
	Photo (4 x 6"): PP-201 / Borderless* ²	Approx. 53secs.
Printable Width	Bordered:	Up to 203.2mm
	Borderless:	Up to 216mm
Printable Area	Bordered Printing* ³ :	Top / Bottom / Right / Left margin: each 0mm (Supported Paper Size: A4 / Letter / 4 x 6" / 5 x 7" / 8 x 10")
	Bordered Printing:	Top margin: 3mm, Bottom margin: 5mm, Left / Right margin: each

		3.4mm (Letter / Legal: Left: 6.4mm, Right: 6.3mm)	
Recommended Printing Area	Top Margin:	46.0mm	
	Bottom Margin:	35.0mm	
Paper Size	A4, A5, B5, Letter, Legal, 4 x 6", 5 x 7", 8 x 10", Envelopes (DL, COM10), Custom Size (width 55mm - 215.9mm, length 91mm - 584.2mm)		
Paper Handling (Rear Tray) (Maximum Number)	Plain Paper	A4, A5, B5, Letter = 50, Legal = 50	
	Photo Paper Plus Glossy II (PP-201)	A4, 4 x 6" = 10	
	Photo Paper "Everyday Use" (GP-601)	A4, 4 x 6" = 10	
	Matte Photo Paper (MP-101)	A4, 4 x 6" = 10	
	Photo Stickers (PS-101)	1	
	Envelope	European DL / US Com. #10 = 10	
Paper Weight	Rear Tray:	Plain Paper: 64 - 105g/m², Canon specialty paper: max paper weight: approx. 275g/m² (Photo Paper Plus Glossy II (PP-201))	
Ink End Sensor	Dot Count		
Print Head Alignment	Auto / Manual		
Network			
Protocol	TCP/IP		
Wireless LAN	Network Type:	IEEE802.11n / IEEE802.11g / IEEE802.11b (infrastructure mode)	
	Frequency Band:	2.4GHz	
	Range:	Indoor 50m (depends on the transmission speed and conditions)	

	Security:	WEP64 / 128bit, WPA- PSK (TKIP / AES), WPA2-PSK (TKIP / AES)
System Requirements (Please visit www.canon-asia.com to check OS compatibility and to download the latest driver updates.)	Windows:	Windows 8 / Windows 7 / Window Vista / Windows XP /
	Macintosh:	Mac OS X v10.6.8 or later
General		
Interface	USB 2.0 Hi-Speed	
Apple AirPrint	Available	
Google Cloud Print	Available	
PictBridge	Wireless LAN:	Available
PIXMA Cloud Link	From smartphone or tablet:	Available
	From printer:	Available
PIXMA Printing Solutions	Available	
Access Point Mode	Available	
Operating Environment*4	Temperature:	5 - 35°C
	Humidity:	10 - 90% RH (no dew condensation)
Recommended Environment *5	Temperature:	15 - 30°C
	Humidity:	10 - 80% RH (no dew condensation)
Storage Environment	Temperature:	0 - 40°C
	Humidity:	5 - 95% RH (no dew condensation)
Acoustic Noise (PC Print)	Photo (4 x 6")*6	Approx. 38.0 dB(A)
Power	AC 100 - 240V, 50 / 60Hz	
Power Consumption	Standby (scanning lamp is off) (USB connection to PC):	10W (1.8W Standby)
	OFF:	Approx. 0.2W
	Printing* ⁷ (Wireless LAN connection to PC)	Approx. 10W
Environment	Regulation:	RoHS (EU, China), WEEE (EU)

	Eco-Label:	Energy Star, EPEAT	
Dimension (W x D x H)	Approx. 322 x 185 x 62mm		
Weight	Approx. 2.0kg		
Portable Kit (Optional)			
Type	Lithium-ion		
Voltage Level	11.1V 2100mAh		
Charging Time	Approx. 3hrs.		
Remaining Indication	LED 3 steps		
Printable Pages*8	Approx. 240 sheets (Wireless LAN connection to PC) Approx. 290 sheets (USB connection to PC)		
Weight and Size of Optional Items			
Battery Pack	Weight:	Approx. 180g	
	W x D x H:	161 x 41 x 27mm	
Battery Attachment	Weight:	Approx. 80g	
	W x D x H:	268 x 54 x 31mm	
Automobile Power Unit (Optional)			
Compatible Automobile Car	DC12V / 24V negative ground car		
Input Voltage	DC12 / 24V		
Output Level	DC16V, 3A		
Dimensions (W x D x H)	120 x 60 x 36mm		
Weight	Approx. 380g (cable included)		

Specifications are subject to change without notice. :

*1 Ink droplets can be placed with a pitch of 1/9600inch at minimum.

Photo print speed is based on the default setting using ISO / JIS-SCID N2 on Photo Paper Plus Glossy II and does not take into account data processing time on host computer. Print speed may vary depending on system configuration, interface, software, document complexity, print mode, page coverage, type of paper used etc.

*3 Paper types NOT supported for borderless printing are as follows: Envelope, Photo Stickers.

*4 The performance of the printer may be reduced under certain temperature and humidity conditions.

^{*2} Document print speeds are the averages of ESAT in Office Category Test for the default simplex mode, ISO / IEC 24734.

- *⁵ For the temperature and humidity conditions of papers such as photo paper, refer to the paper's packaging or the supplied instructions.
- *6 When printing ISO / JIS-SCID N2 on 4" x 6" Photo Paper Plus Glossy II using default settings.
- *7 When printing ISO / JIS-SCID N2 on A4 size plain paper using default settings.
- *8 Conditions: Tested under normal temperature and humidity, using fully-charged new battery, printing ISO / IEC 24712 files (5 patterns) continuously in colour on A4 plain paper in Standard mode of printer driver.

Disclaimer:

- You need to install ink tanks or ink cartridges of all colours whether you perform black and white printing or colour printing. If any one of the ink tanks or ink cartridges is not installed, an error occurs and you cannot perform printing.
- Depending on the paper or the print settings, colour ink may be consumed even when you print a document in black or perform printing in black and white. When any one of the colours of ink has run out, you need to replace the ink tank or ink cartridge.
- When you use the Canon printer for the first time after you install the bundled ink tanks, the printer consumes a small amount of ink in the amount to enable printing by filling the nozzles of the Print Head with ink. For this reason, the number of sheets that can be printed with the first ink tanks is fewer than the succeeding ink tanks.
- The printing costs described in the brochures or websites are based on the consumption data from not the first ink tank / ink cartridge but the succeeding ink tank / ink cartridge.
- To keep printer's performance, Canon printer performs cleaning automatically according to its condition. When the printer performs cleaning, a small amount of ink is consumed. In this case, all colours of ink may be consumed.
 - [Cleaning function]
 - The cleaning function helps the printer to suck air bubbles or ink itself from the nozzle and thus prevents print quality degradation or nozzle clogging.
- The repairing parts for printers will be available five years after production is discontinued. Depending on your model, we may ask you to replace it with a new one, or one with almost the same performance as a maintenance service. In this case, it may be that you cannot use supplies or accessories for your model or the compatible OS will be changed.
- The warranty term for free repair varies from country to country and starts from the date of purchase. Free repair does not apply to supplies (paper or ink tanks / cartridges / print head) even within the warranty term.
- To obtain good printing quality, use up ink within six months after opening.
- Regarding a solution to a problem caused by using non-genuine ink cartridges (including ones
 supplemented with non-genuine ink by making a hole in the cartridge or so), a fee will be
 charged even within the warranty term. Keep this in your mind when you use non-genuine
 ink.
- If you use non-genuine ink cartridges (including ones supplemented with non-genuine ink by making a hole in the cartridge or so), they may have a negative effect on the performance of the printer or the printing quality may be reduced. In addition, though it is a rare case and does not present a safety hazard, it is reported that a print head will become heated or smoke will be emitted from it due to an ingredient not contained in genuine Canon ink. (Note that this

does not apply to all non-genuine ink.)

- CREATIVE PARK PREMIUM is a premium content service available exclusively to users only when all of the colours of genuine Canon inks are installed.
- A printer with a fax function stores the following fax data in printer's memory:
 - Faxes not printed out due to conditions such as ink running out.
 - Faxes in the send queue.

If you disconnect the power cord, the date and time settings are reset and faxes stored in the printer's memory will be deleted. Before you disconnect the power cord, confirm that faxes you need to keep have already been printed or sent.

• If you will be installing the Canon printer driver on Mac OS X and using the printer through a network connection, you can select [Bonjour] or [canonijnetwork] in the [Add Printer] dialog. If [Bonjour] is selected, remaining ink level messages may differ from those indicated by [canonijnetwork]. [canonijnetwork] is not displayed if the Canon printer driver is not installed. Access our web site through the Internet and download the latest printer driver for your model. Canon recommends you to use [canonijnetwork] for printing.



• Address: Office No. D-4, Ambika Darshan Building, Chittabhai Patel Road, Behind Sapan Nikhil Classes, Ahead of Kandivali Bus Depot, Kandivali (E), Mumbai-400101.

• Phone No: +022-28460505 (50 lines)

• Email: itsolutions@varay.co.in